


## INTRODUCTION

The TROPO series of LED drivers is equipped with a Universal Mounting Clip design. The customer can decide which of the six available mounting locations are most suitable for the particular application and install the mounting feet at the time of installation.

The TROPO driver is shipped from the factory with 2 clips which should be suitable for most installations. If additional or replacement clips are required, please contact ENEDO.


Prior to installation of the mounting clips, determine which of the six locations to attach the clips to

This application note will address the operation of TROPO drivers with respect to the output voltage operation range.

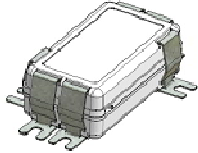

## CLIP INSTALLATION

1. Position the 2 small feet of the clip into the indentations on the bottom of the driver.

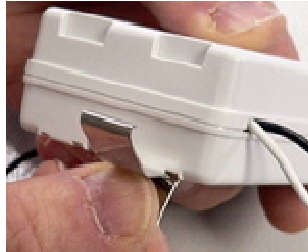


2. Rotate the upper part of the clip up towards the larger indentation on the top of the driver.



3. With a finger at the base of the clip, apply gentle pressure upward on the clip.





4. Until the clip snaps into place.

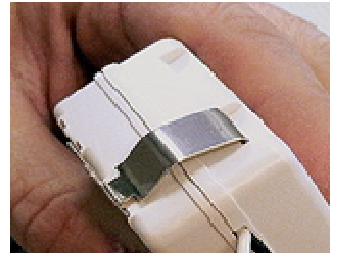

## CLIP REMOVAL

To remove the clip, use a small pair of pliers on the mounting clip flange and twist away from you. This will disengage the feet from the case and free the clip.

Be careful not to apply excessive outward force as this may damage the driver plastic case material.

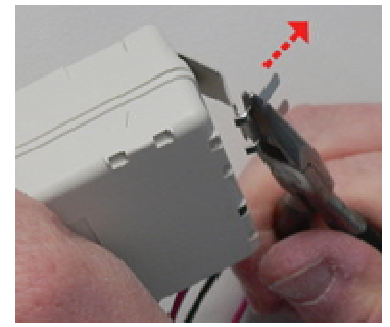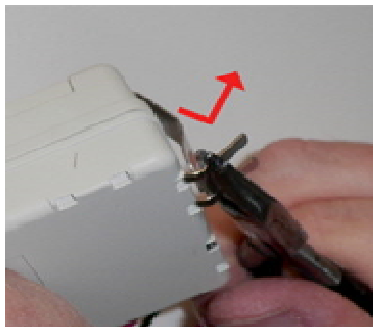

Specifications appearing in ENEDO's catalogues and brochures as well as any oral statements are not binding. All descriptions, drawings and other particulars (including dimensions, materials and performance data) given by ENEDO are as accurate as possible but, being given for general information, and are not binding on ENEDO. ENEDO makes thus no representation or warranty as to the accuracy of such material. We assume no liability other than as agreed in the terms of the individual contracts and we reserve the right to make technical modifications in the course of our product development. Our product information solely describes our goods and services and is in no way to be construed or interpreted as a quality or condition guarantee. The aforesaid shall not relieve the customer of its obligation to verify the suitability of our Products for the use or application intended by the purchaser. Customers are responsible for their products and applications. ENEDO assumes no liability from the use of its products outside of specifications. No license is granted to any intellectual property rights by this document.